

SETTING PARENTAL CONTROL FOR ON DEMAND: (Affects Channel 1 ONLY)

1. Go to the On Demand channel (Channel 01).
2. Press the “SEL” button to continue to the Main Menu.
3. Press the “A” button for setup.
4. You will see the following options:
 - 1 – SETUP PIN CODE (TO CHANGE PIN CODE)
 - 2 – SET RATING RESTRICTIONS
 - 3 – SET VIDEO LOCK
 - 4 – REVIEW ALL SETTINGS
5. Press #1 to SETUP PIN CODE. There is no default pin number. Simply enter any 4 digit number and then enter it a second time to CONFIRM. NOTE: If #1 says TO CHANGE PIN CODE, you must call Blue Ridge Communications to have the previous pin code reset. **(Important Note: After setting up a Pin Code you MUST set a Rating Restriction or Video Lock for the pin code to do anything. If you set up a pin code without a Rating Restriction or Video Lock, you will enable adult programming purchases which were previously blocked!)**
6. Press #2 to SET RATING RESTRICTIONS if desired (will block purchases by rating):
 - PRESS 1 FOR NO RESTRICTIONS
 - PRESS 2 FOR RESTRICT X, NC-17, R, PG-13, PG
 - PRESS 3 FOR RESTRICT X, NC-17, R, PG-13
 - PRESS 4 FOR RESTRICT X, NC-17, R
 - PRESS 5 FOR RESTRICT X, NC-17
7. Press #3 to SET VIDEO LOCK if desired (will block ALL purchases). Then enter your pin number. Finally, press #1 for ON, and then the “C” button to go back to the “Main Menu”.
(Note: If you turn Video Lock “on” **AND** set a Rating Restriction as well, titles of adult programming will not be shown, since it will immediately require a pin number to proceed.)

SETTING THE PURCHASE PIN: (Affects Channels 751-757 ONLY)

1. Press the “Settings” button. (“Quick Settings” screen appears.)
2. Press the “A” button for “More Settings”. (“General Settings” screen appears.)
3. Press the Up or Down Arrow button to highlight “Purchase Pin”.
4. Press the “SEL” button to access options. (“Disable” is highlighted.)
5. Press “Up Arrow” to highlight “Enable”.
6. Press the “SEL” button to activate. (Must then enter pin number of “1111”.)
7. Press the “A” button for OK. (It will now show “Enabled”.)
8. If the customer wants to change the pin number, they would press the “SEL” button again, press the “Up Arrow” to highlight “Change”, press the “SEL” button for pin entry, enter the current pin number 1111, enter the new pin number, and re-enter the new pin number for confirmation. Then press “A” button for OK. The new pin number is now in effect.

SETTING PARENTAL CONTROL: (Affects All Channels EXCEPT Channel 1)

1. Press the “Settings” button. (“Quick Settings” screen appears.)
2. Press the “A” button for “More Settings”. (“General Settings” screen appears.)
3. Press the Up or Down Arrow button to highlight “Parental Control”.
4. Press the “SEL” button to access options. (“Disable” is highlighted.)
5. Press “Up Arrow” to highlight “Enable”.
6. Press the “SEL” button to activate. (Must then enter pin number. Use “0000” or “1111”.)

7. Press the “A” button for OK. (It will now show “Enabled”.)
8. If a customer wants to change the pin number, they would have to press the “Down Arrow” to highlight “Blocking Pin”. Then press the “SEL” button to access options, press “Up Arrow” to highlight “Change”, press the “SEL” button again for pin entry, enter the current pin number “0000” or “1111”, enter the new pin number, and re-enter the new pin number for confirmation. Then press the “A” button for OK. The new pin number is now in effect.
9. In addition to activating the Pin Number, you **MUST** choose “Blocked Channels”, “Blocked Ratings”, or “Blocked Time” for the Pin Number to do anything. You can also choose “Blocked Titles” if you don’t want the racy titles displayed on the Channel Banner or the Guide Screen.

To Set Up “BLOCKED CHANNELS”:

1. Press the “Settings” button. (“Quick Settings” screen appears.)
2. Press the “A” button for “More Settings”. (“General Settings” screen appears.)
3. Press the Up or Down arrow to highlight “Blocked Channels”.
4. Press the “SEL” button to access channels.
5. Use the “PAGE +/-” button and/or the Up/Down Arrow keys to highlight the channels you want to block.
6. Press the “SEL” button to choose that channel. (A padlock will appear beside the channel.)

To Set Up “BLOCKED RATINGS”:

1. Press the “Settings” button. (“Quick Settings” screen appears.)
2. Press the “A” button for “More Settings”. (“General Settings” screen appears.)
3. Press the Up or Down Arrow to highlight “Blocked Ratings”.
4. Press the “SEL” button to access ratings.
5. Press the Down Arrow to highlight the LOWEST rating you want to block.
6. Press the “SEL” button to choose that rating. (All higher ratings will automatically be selected.)
7. Press the “A” button to accept.

To Set Up “BLOCKED TIME”:

1. Press the “Settings” button. (“Quick Settings” screen appears.)
2. Press the “A” button for “More Settings”. (“General Settings” screen appears.)
3. Press the Up or Down Arrow to highlight “Blocked Time”.
4. Press the “SEL” button to highlight “Off”. Press “Up Arrow” to highlight “On”, then press “Right Arrow” to access the day followed by the Up or Down Arrow to select it, repeat for “Start” and “Stop” times.
5. Finally, press the “A” button to accept.

To Set Up “BLOCKED TITLES”:

1. Press the “Settings” button. (“Quick Settings” screen appears.)
2. Press the “A” button for “More Settings”. (“General Settings” screen appears.)
3. Press the Up or Down Arrow to highlight “Blocked Titles”.
4. Press the “SEL” button to highlight “Disable”.
5. Press “Up Arrow” to highlight “Enable”.
6. Press the “A” button to accept.