



digital cable

quick reference guide



Digital cable the way it was meant to be

It's time for you to discover digital cable the way it was meant to be—with convenience, variety, and control. Search fast. Save time. Find the shows you want to watch when you want to watch them. It's time to engage your television viewing experience and enjoy every minute you spend watching TV.

Time Grid

Passport Guide's easy-to-use Time Grid helps you find shows in seconds. Just press the GUIDE button on your remote to view 90 minutes of programming at a glance. Use the arrow buttons to navigate the grid.

 
Press GUIDE again to find shows by title, keyword, channel, or theme. It's that easy.



Press GUIDE twice to search



Select Theme from Find Shows

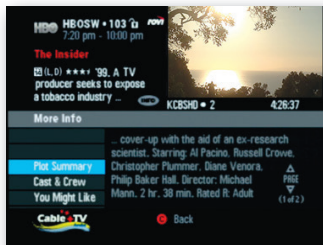

Press INFO on a selected program

Find Shows

Find what you want to watch fast. With just 2 clicks of your GUIDE button, you can search for shows by title, keyword, channel, or theme to find programs about your favorite actor or topic.

Themes

 
Find shows by themes like Series and Specials, Movies, Sports, and more. Arrow right to navigate the list.

Program Info

Select a program and press INFO to access the Plot Summary, Cast & Crew, and You Might Like options. From the Cast & Crew list, you can view actors and crew members.

Info Banner

Press the INFO button once to get information about the program you are currently watching. Use the arrow buttons to browse other channels and times without leaving the show you are currently viewing.

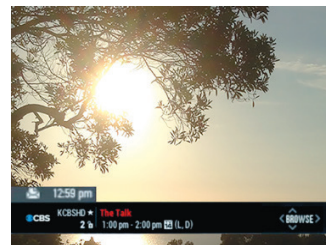

Press INFO once

Quick Info

 
Press the INFO button twice to get a brief program description. Use the arrow buttons to browse other channels and times without leaving the show you're currently viewing.



Press INFO twice to browse

General Settings

Press SETTINGS then A to personalize your television experience. Adjust My Preferences, Parental Controls, Timers, Purchase Locks and PINS, and more.

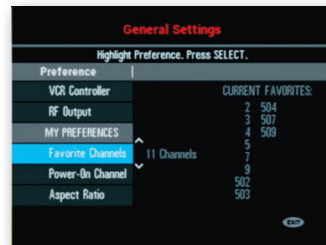


Press Settings then A to personalize

Timers

You can set various types of timers, including a Sleep Timer, Power-On-Timer, Power-Off Timer, and Reminder Timer.



 From the Time Grid, highlight a program airing in the future, press SELECT/OK, and choose Set Reminder Timer from the options. A reminder timer will appear next to the title.

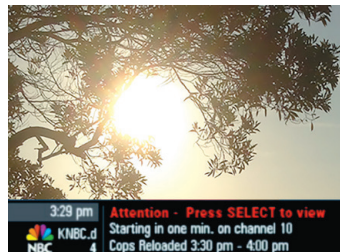

The Channel Banner displays a reminder message one minute before the program starts. Press SELECT/OK to select the program.





To review, modify or clear timers, press SETTINGS and A to access General Settings. Press the up or down arrow key to highlight Timers, and press SELECT/OK.



Choose from these timers:
Sleep Timer: Turn off set-top after specific number of minutes.
VCR Timer: Set up to eight timers to record programs.
Power-On Timer: Channel, day, and time that display when set-top box turns on.
Power-Off Timer: Day and time when set-top automatically turns off.
Reminder Timer: Reminders about specific programs/events.

Video on Demand

Enjoy TV shows, movies, and more! On Demand* gives you the convenience to enjoy TV on your schedule without ever having to leave the comfort of your couch.

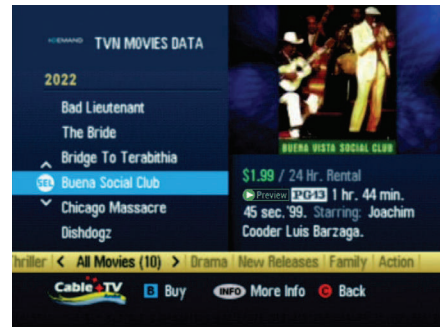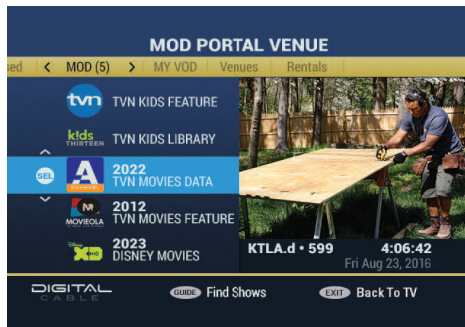

Press MENU once to access categories such as Movies On Demand from the Quick Menu. Or you can press the On Demand button on your remote or simply tune directly to the On Demand channel.

On Demand movies are grouped by categories. You can order HD movies, new releases, and more. Select My Saved Programs to view recently purchased movies and shows.

Find a movie in seconds by navigating with the left and right arrow buttons to choose a subcategory or genre. Then use the up and down arrow buttons to choose a title. Press INFO for more information. Press B to buy. If the program description starts with "Preview," press PLAY to play a preview.

* On Demand not available in all areas. HD movies require HD setup box and HD television.

Don't just watch TV. Experience it with Passport Guide.