


Programming Remote IRC-422 or IRC-425

Programming the Motorola IRC-422 or IRC-425 for your television is usually very simple, as these remotes have an 'autosearch' feature.

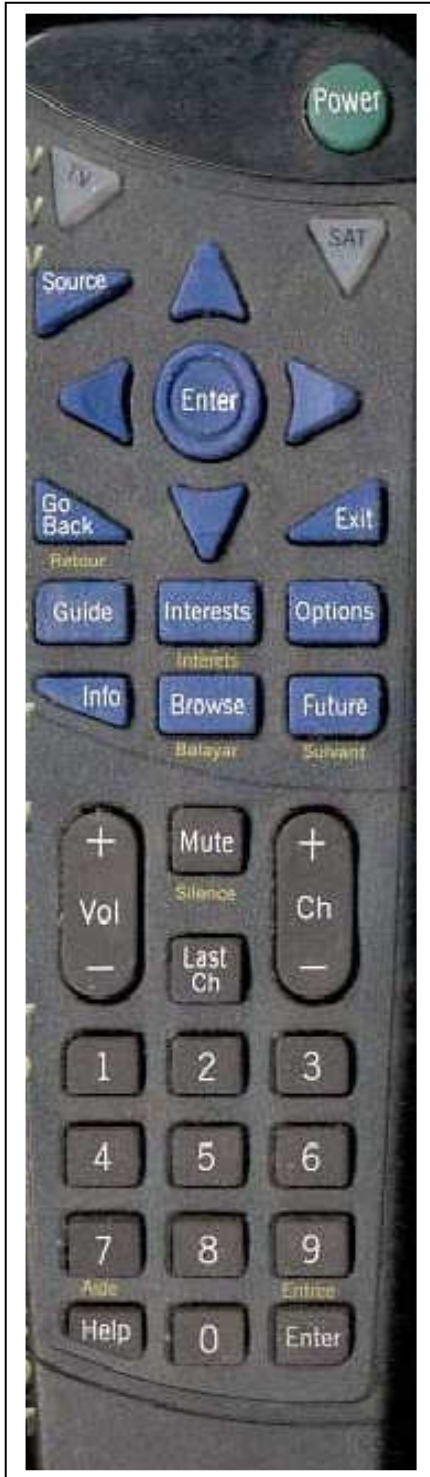

To begin, make sure the remote has fresh 'AAA' batteries installed, and the television is ON.

Press and hold the 'TV' button down until both the 'TV' and 'CBL', 'SAT', or 'M' buttons blink.

Now, press and release the blue 'UP arrow' repeatedly until the television turns off.

To be sure you have the right code, press the 'DOWN' arrow 2 or three times. The television *may* turn back on.

SLOWLY press and release the 'UP arrow' repeatedly until the television turns back off.

Press the 'Enter' button to store the code (you may have to press it twice).

When the code is stored, the 'TV' button will blink 3 times.

*style of remote may vary.