

Millennium 3



Programming Your TV

1. Turn on your TV.
2. Press “VCR” or “TV” button.
3. Press and hold “Setup” button until LED light blinks twice.
4. Enter 4 digit code from list.

Note: Use “VCR” button for TV/VCR combos.

Searching For Your Code

If your TV, VCR, or Cable Converter does not respond to the Millennium 3 after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

For example, to search for a code for your TV:

1. Turn on your TV.
2. On the Millennium 3, press and hold “SETUP” until the LED light blinks twice, then release “SETUP”.
3. Enter “9 – 9 – 1”. The LED light will blink twice.
4. Aim the remote control at the TV and slowly alternate between pressing “UP ARROW” and “TV”. Stop when the TV turns off.
5. Press “SETUP” once to lock in the code.
6. To search for the codes of other components, repeat steps 1 through 5, but substitute the appropriate key (ie., VCR or CBL) for the (VCR or Cable) component you are searching for.

Assigning Volume Control

1. Press and hold “SETUP” button until the LED light blinks twice.
2. Enter “9 – 9 – 3”.
3. Press “TV” for TV control or press “CBL” for Cable Box.

Using the Shift Key

The SHIFT key is designed to provide access to channel control capabilities of your TV (e.g., Digits 0-9, Up/Down, Enter, and Last) and Video on Demand (VOD) features of your cable converter.

Activate TV's Channel Control Capabilities

1. On the Millennium 3, press "SHIFT" once.
2. Press "TV" once. The LED light will blink twice.

Reset Channel Control To Cable Converter

1. On the Millennium 3, press "SHIFT" once.
2. Press "CBL" once.

Activate Cable's Video on Demand (Using the VCR Transport Keys)

1. On the Millennium 3, press "SHIFT" once.
2. Press "Play" once. The LED will blink twice.

Reset VCR Transport Keys for VCR Use

1. On the Millennium 3, press "SHIFT" once.
2. Press and release "CBL".

<i>TV Setup Codes (Part 1)</i>					
BRAND	CODE	BRAND	CODE	BRAND	CODE
A-Mark	0003	Clairtone	0185	GE (Part 2)	0019
AOC	0030 0019 0003	Concerto	0056	Gibraltar	0017 0030 0019
	0052 0185	Contec	0180 0185	GoldStar	0030 0178 0019
Abex	0032	Craig	0180		0056 0001 0032
Admiral	0093	Crosley	0054	Gradiente	0053 0056
Adventura	0046	Crown	0180 0039	Grunpy	0180 0179
Aiko	0092	Curtis Mathes	0047 0054 0154	Hallmark	0178
Akai	0030		0051 0451 0093	Harley Davidson	0179
Alaron	0179		0060 0030 0145	Harman Kardon	0054
Ambassador	0177		0056 0016 0039	Harvard	0180
Anam	0180		0166 0466	Hitachi	0145 0056 0032
Anam National	0055	Daewoo	0451 0019 0049		0038 0151
Archer	0003		0092 0623 0624	Infinity	0054
Audiovox	0451 0180 0003	Daytron	0019	Inteq	0017
	0092 0623	Denon	0145	JBL	0054
Baysonic	0180	Dumont	0017 0019	JCB	0000
Belcor	0019	Dwin	0720 0774	JVC	0053
Bell & Howell	0154 0016	Electroband	0000 0185	Janeil	0046
Bradford	0180	Emerson	0154 0236 0463	KEC	0180
Brockwood	0019		0180 0282 0178	KTV	0180 0030 0039
Broksonic	0236 0463 0003		0019 0179 0039		0185 0280
CXC	0180		0038 0177 0185	Kaypani	0052
Candle	0030 0056 0046		0280 0623 0624	Kenwood	0030 0019
	0186	Envision	0030	Kloss	0024 0046
Carnivale	0030	Fisher	0154 0159	LG	0056
Carver	0054	Fujitsu	0179	LXI	0047 0054 0154
Celebrity	0000	Funai	0180 0179 0171		0156 0178
Cineral	0451 0092	Futuretech	0180	Logik	0016
Citizen	0060 0030 0056	GE (Part 1)	0047 0051 0451	Luxman	0056
	0039 0046 0092		0093 0282 0178	MEI	0185
	0186 0280		0021 0055 0027	MGA (Part 1)	0150 0030 0178

<i>TV Setup Codes (Part 2)</i>							
BRAND	CODE		BRAND	CODE		BRAND	CODE
MGA (Part 2)	0019		Penney (Part 2)	0060 0030 0178		Sampo	0030 0039 0032
MTC	0060 0030 0019			0021 0019 0018			0052
	0056 0185			0056 0039 0003		Samsung	0060 0030 0178
Magnavox	0054 0030 0179			0027 0032 0135			0019 0056 0032
	0020 0024 0096		Philco	0054 0463 0030		Samsux	0039
	0186 0187 0386			0145 0019 0020		Sansei	0451
Majestic	0016			0096		Sansui	0463
Marantz	0054 0030		Philips	0054		Sanyo	0154 0146 0159
Matsushita	0250		Pilot	0030 0019 0039		Scimitsu	0019
Megatron	0178 0145 0003		Pioneer	0038 0166		Scotch	0178
Memorex	0154 0250 0150		Portland	0019 0039 0092		Scott	0236 0180 0178
	0178 0056 0016		Prism	0051			0019 0179
Midland	0047 0017 0051		Proscan	0047		Sears	0047 0054 0154
	0039 0032 0135		Proton	0178 0003 0052			0156 0178 0179
Minutz	0021			0466			0056 0146 0159
Mitsubishi	0093 0150 0178		Pulsar	0017 0019			0171
	0019		Quasar	0051 0250 0165		Semivox	0180
Motorola	0093 0055			0055		Semp	0156
Multitech	0180		RCA	0047 0051 0093		Sharp	0093 0165 0039
NAD	0156 0178 0166			0019 0018 0038			0386
NEC	0030 0019 0056			0090 0135		Shogun	0019
	0497		Radio Shack	0047 0154 0165		Signature	0016
NTC	0092			0180 0030 0178		Simpson	0186 0187
Nikko	0030 0178 0092			0019 0056 0039		Sony	0000 0080
Noshi	0018			0032		Soundesign	0180 0178 0179
Orwa	0180		Realistic	0154 0165 0180			0186
Optimus	0154 0250 0166			0030 0178 0019		Spectricon	0003
Optonica	0093 0165			0056 0039 0032		Squareview	0171
Orion	0236 0463 0179		Rhapsody	0185		Starlite	0180
Panasonic	0051 0250 0055		Runco	0017 0030 0497		Supre-Macy	0046
Penney (Part 1)	0047 0156 0051		SSS	0180 0019		Supreme	0000

<i>TV Setup Codes (Part 3)</i>		<i>VCR Setup Codes (Part 1)</i>			
BRAND	CODE	BRAND	CODE	BRAND	CODE
Sylvania	0054 0030 0020	Admiral	0048	Electroponic	0037
	0096	Adventura	0000	Emerex	0032
Symphonic	0171	Aiko	0278	Emerson	0037 0184 0000
TMK	0178 0056 0177	Aiwa	0037 0000 0307		0121 0043 0209
Tandy	0093	Akai	0041 0061 0106		0002 0278 0061
Tatung	0055 0003	American High	0035		0208 0212 0479
Technics	0051 0250	Asha	0240		0561
Technol Ace	0179	Audiovox	0037	Fisher	0047 0104 0054
Techwood	0051 0056 0003	Beaumar	0240		0066
Teknika	0054 0180 0150	Bell & Howell	0104	Fuji	0035 0033
	0060 0019 0179	Broksonic	0184 0121 0209	Funai	0000
	0056 0016 0039		0002 0479	GE	0060 0035 0048
	0092 0186	CCE	0072 0278		0240 0202
Telefunken	0056	Calix	0037	Garrard	0000
Toshiba	0154 0156 0060	Canon	0035	Go Video	0526
Tosonic	0185	Capehart	0020	GoldStar	0037 0038
Totevision	0039	Carver	0081	Gradiente	0000 0008
Universal	0027	Cineral	0278	HI-Q	0047
Vector Research	0030	Citizen	0037 0278	Harley Davidson	0000
Victor	0053	Coit	0072	Harman Kardon	0081 0038
Vidikron	0054	Craig	0037 0047 0240	Harwood	0072
Vidtech	0178 0019		0072 0271	Headquarter	0046
Viking	0046	Curtis Mathes	0060 0035 0041	Hitachi	0000 0042 0041
Wards	0054 0165 0030		0162		0105
	0178 0021 0019	Cybernex	0240	JVC	0067 0041 0008
	0179 0056 0016	Daewoo	0045 0278 0020	Jensen	0041
	0020 0027 0080		0561	KEC	0037 0278
	0096	Daytron	0020	KLH	0072
White Westinghouse	0623 0624	Denon	0042	Kenwood	0067 0041 0038
Yamaha	0030 0019	Dynatech	0000	Kodak	0035 0037
Zenith	0017 0016 0092	Electrohome	0037	LXI	0037

VCR Setup Codes (Part 2)						
BRAND	CODE	BRAND	CODE	BRAND	CODE	
Lloyd's	0000 0208	Orion	0184 0002 0479	Samsung	0240 0045	
Logik	0072	Panasonic	0035 0162 0077	Sanky	0048 0039	
MEI	0035		0225	Sansui	0000 0067 0041	
MGA	0240 0043 0061	Penney	0035 0037 0240		0271 0479	
MGN Technology	0240		0042 0038 0054	Sanyo	0047 0240 0104	
MTC	0240 0000	Pentax	0042 0105		0046	
Magnasonic	0278	Philco	0035 0209 0479	Scott	0184 0045 0121	
Magnavox	0035 0039 0081	Philips	0035 0081 0062		0043 0212	
	0000 0149	Pilot	0037	Sears	0035 0037 0047	
Magnin	0240	Pioneer	0067		0000 0042 0104	
Marantz	0035 0081	Portland	0020		0046 0054 0066	
Marta	0037	Profitronic	0240		0105	
Matsushita	0035 0162	Proscan	0060 0202	Semp	0045	
Memorex	0035 0037 0048	Protec	0072	Sharp	0048 0062	
	0039 0047 0240	Pulsar	0039	Shintom	0072	
	0000 0104 0162	Quarter	0046	Shogun	0240	
	0046 0307	Quartz	0046	Slinger	0072	
Minolta	0042 0105	Quasar	0035 0162 0077	Sony	0035 0032 0000	
Mitsubishi	0048 0067 0043	RCA	0060 0035 0048		0033 0034	
	0061		0240 0042 0149	Sylvania	0035 0081 0000	
Motorola	0035 0048		0077 0105 0106		0043	
Multitech	0000 0072		0202	Symphonic	0000	
NEC	0104 0067 0041	Radio Shack	0000	TMK	0240 0208	
	0038	Radix	0037	Tatung	0041	
Nikko	0037	Randex	0037	Teac	0000 0041	
Nikon	0034	Realistic	0035 0037 0048	Technics	0035 0162	
Noblex	0240		0047 0000 0104	Teknika	0035 0037 0000	
Olympus	0035		0062 0046 0066	Thomas	0000	
Optimus	0037 0048 0104	Ricoh	0034	Toshiba	0045 0043 0066	
	0162	Runco	0039		0212	
Optonica	0062	STS	0042	Totevision	0037 0240	

<i>VCR Setup Codes (Part 3)</i>		<i>TV/VCR Combo Setup Codes</i>			
BRAND	CODE	BRAND	CODE	BRAND	CODE
Unitech	0240	American High	0035 (for TV 0051)	RCA	0060 (for TV 0047)
Vector	0045	Brocksonic	0002 0294		0035 (for TV 0051)
Vector Research	0038	Colt	0072		0048 (for TV 0093)
Video Concepts	0045 0061	Curtis Mathis	0035 (for TV 0051)	Sansui	0000 0479
Videosonic	0240	Daewoo	0278	Sanyo	0240
Wards	0060 0035 0048	Emerson	0002 0294 0479	Sears	0000 0037
	0047 0081 0240	Funai	0000	Sharp	0048 (for TV 0093)
	0000 0042 0072	GE	0035 (for TV 0051)	Sony	0032 (for TV 0000)
	0149 0062 0212		0060 (for TV 0047)	Symphonic	0000
White Westinghouse	0278		0048 (for TV 0093)	Zenith	0000
XR-1000	0035 0000 0072		0240		
Yamaha	0038	Hitachi	0035 (for TV 0051)		
Zenith	0039 0000 0033		0000		
	0034	HQ	0000		
		Lloyd's	0000		
		MGA	0240		
		Magnavox	0081 (for TV 0054)		
			0035 (for TV 0051)		
			0000		
		Magnin	0240		
		Memorex	0162 (for TV 0250)		
			0037		
		Mitsubishi	0048 (for TV 0093)		
		Orion	0002 0294 0479		
		Panasonic	0035 (for TV 0051)		
			0162 (for TV 0250)		
		Penney	0035 (for TV 0051)		
			0162 (for TV 0250)		
			0240		
		Quasar	0035 (for TV 0051)		
			0162 (for TV 0250)		