Blue Ridge

DTA Mini Boxes

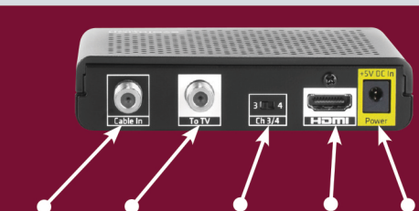

RF Input | RF Output | Channel 3/4 Switch | HDMI to TV | DC Power Supply

powered by TiVo

Pair the Remote Control to the DTA Mini Box

1. Press the **Menu** button.
2. Select **Settings**.
3. Select **Remote Control** and then select **Remote Control Pairing**.
4. Follow the on-screen instructions.

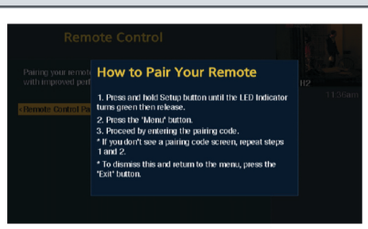

REMOTE FUNCTIONS

TV Input* – Toggle TV Input

Info – View the channel name and number, date and time

Page Up – Scroll through guide

Menu – Display the Main Menu

OK – Select a highlighted item within Menus. Display channel name and number, date and time

Volume – Audio up & down

Guide – For future use

Yellow A – Toggle to secondary language (if available)

*TV must be programed with the remote

LED Indicator – Button press and special command indication

TV Power* – Turn your TV on or off

Last – Return to the previous channel or menu

Exit – Return to watching TV

Page Down – Scroll through guide

Channel – Channel up & down

Mute – Sound on & off

Red C – Toggles through available closed captioning

Setup – Program your remote control to the set-top box and TV

LED BLINK PATTERNS

LED Behavior	HD uDTA Status	Troubleshoot
Red | Green | Red | Green	Device is looking for signal The HD uDTA is in Hunt Mode	Check RF connections
Green | Green | Red	Device in Pending Initialization Mode (has QAM lock, acquired CAT and waiting for an activation)	Check device ID, send refresh
Green | Green | Green	Device in Code Download Mode (code download pending)	Wait for device to complete download
Solid Green	Device is in normal operations, decoding video	No action required
Blinking Green Light	Device in Trouble Mode	Power cycle & check connections to verify device is not working

FUNCTIONS

Grid Guide

To enter the grid guide press the **Guide** button on the remote.

Mini Guide

Press the **OK** button on the remote while watching TV to access the Mini Guide.

Info Banner

Press the **Info** button on the remote while watching TV to access the full Info Banner. Press the **Arrow Right** button for the basic Info Banner.

Press the **CH Up**/**Down** buttons to advance one channel up or down with the Info Banner displayed.

Input a **Channel Number** on the remote and wait 3 seconds and the channel will change to the number.

Use the **Arrow Up**/**Down** to switch through the **Program Information**, **Closed Caption** and **Audio Language** menus. Use the **OK** to change options in the **Closed Caption** and **Audio Language** menus.

Press the **Exit, Info** or **Arrow Left** buttons to return to live TV.

SETTINGS MENU

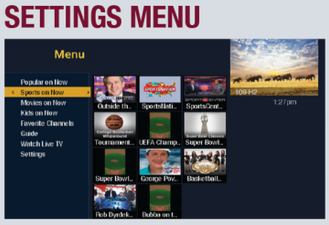

Main Menu

To enter the main menu press the **Menu** button on the remote.

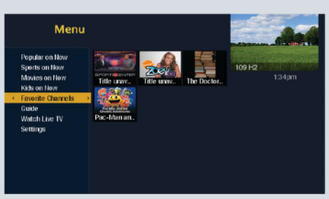

Favorite Channels displays your favorite channels. Refer to the **Favorite Channels** section below for instructions on selecting your favorite channels.

Press the **Menu** button and select **Settings** to update your HD Set-Top Box settings. Press the **Arrow** buttons to navigate through the menu then hit **OK** to make your selection. Press **Exit** once or **Arrow Left** several times to return to watching live TV.

Select **Favorite Channels** to mark or unmark channels you receive and want displayed as your favorites in the Guide. Use the number buttons on the remote to jump to a channel.

Select **Closed Caption** to mark or unmark Closed Captioning **On**/**Off** and to select other custom settings.

Turn on Parental Controls – Use the number buttons on the remote control to enter a four-digit PIN, then enter the same PIN again for confirmation.

Disable Parental Controls – Enter your PIN. When Parental Controls are off anyone can view any shows or watch any channels.

Rating Limits – Choose the highest rating that may be watched without having to enter a PIN.

Hide adult shows – Select **Hide adult shows** to hide the titles and descriptions of any adult shows in the Guide and lock all adult shows, requiring PIN entry to watch.

Lock channels – Highlight and press **OK** on the channels you would like to lock or unlock. Use the number buttons on the remote control to jump to a specific channel. Channels with a lock will require a PIN to view.

Change PIN – While Parental Controls are on, select **Change PIN** from the **Parental Controls** screen. Enter a new PIN, then re-enter the new PIN. Select **OK** on the confirmation screen to save the new PIN.

Audio Language – Select a new Audio Language

HDMI Setup – Configure your mini box with your HD TV

SD Setup – Configure your mini box with your SD TV

Remote Control – Pair your remote to your mini box.Press **Menu**, select Settings, select Remote Control and then select Remote Control Pairing. Follow the on-screen instructions.

Video Window – With video window on, you can continue watching your show in the top right corner of the screen while using the menus.